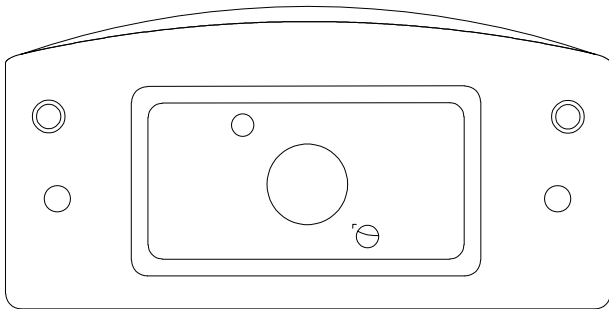
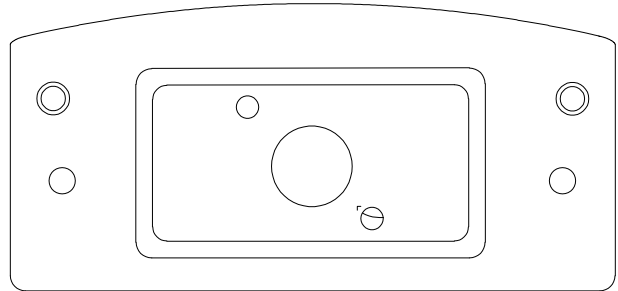
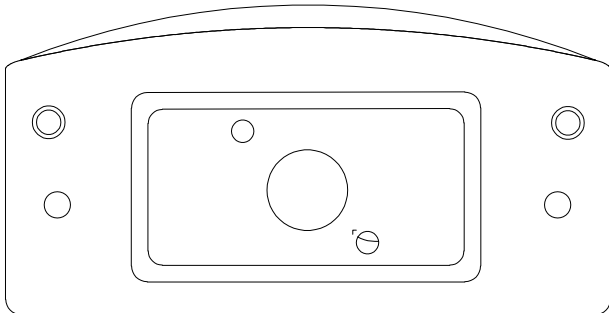
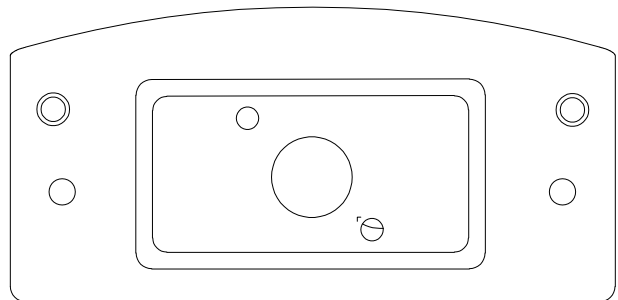


Base+2**Base****Base+3****Base+1**

100

TEMPLATE PREPARATION

Print at 100% / Actual Size. Do not use "Fit to Page". Measure both reference lines. The horizontal and vertical lines must each measure exactly 100 mm. If either measurement is incorrect, adjust the print settings and reprint.

Fix the printed sheet flat to thin cardboard, avoiding wrinkles or distortion. Allow the adhesive to dry before cutting.

Cut only around the external outline of each template. Ignore all holes, openings and other internal lines shown within the template.

Dept. R&D	Technical reference	Created by PJ	23/07/2026		Approved by
		Document type	Document status		
		Title TEMPLATES-V5	DWG No.		
		Rev. 2	Date of issue 28/08/2026	Sheet 1/1	